




LED POCKET MICROSCOPE 60X-100X

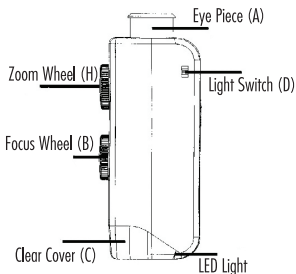

INSTRUCTIONS:


1. Place the sample to be viewed on a flat surface.
2. Place the microscope vertically over the sample with the Clear Cover (C) facing down.
3. Turn on the LED light using the Light Switch (D).
4. Turn the Zoom Wheel (H) to adjust to the desired magnification.
5. Look through the Eye Piece (A) and turn the Focus Wheel (B) to adjust the focus and sharpness.

INSTALLING/REPLACING THE BATTERIES:

1. Slide the Battery Cover (G) towards the bottom of the microscope to open it.
2. Remove old batteries (if necessary) and install the new ones with the center battery negative side up and the 2 outer batteries positive side up. Use the diagram to the left.

Please Note: This microscope uses (3) LR1130 batteries.

3. Slide the Battery Cover (G) back into place.

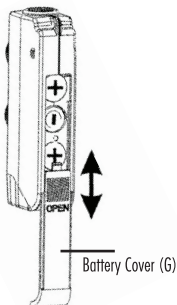

DISTRIBUTED BY



DL WHOLESALE
DLWHOLESALE.COM